

mPower Suite RT 1.0

Quick Start Guide



mPower Electronics Inc.
3046 Scott Blvd. Santa Clara, CA 95054
Phone: +1(408)320-1266
Fax: +1(669)342-7077
info@mpowerinc.com
www.mpowerinc.com

PN: M006-4001-000

v1.0

Step 1. Install Software

Find the latest version of mPower Suite 1.0 on our website at <https://www.mpowerinc.com/software-downloads/> and download to install.

Notes:


- (1) mPower Suite RT 1.0 continues to operate after logging out of Windows.
- (2) Local alarms are only available after logging in to the mPower Suite RT 1.0 application.

Step 2. Insert Dongle into PC USB port.



Step 3. Log In to mPower Suite RT 1.0

Click the below icon on the Windows desktop to login with default user “admin” and default password “mpower.123”.

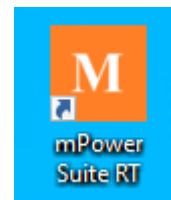

1

Step 4. Setup Connection with mLink

Power on the mLink. In mPower Suite RT 1.0, click on the below white icon to set up the connection.

 


Note:

The connection only needs to be set up one time. Once set up, mPower Suite RT 1.0 automatically tries to connect to the mLink if not connected. The user only needs to power on the mLink and/or press the mLink button to enable its BLE module.


Step 5. Set up Wireless Devices

- 1) Click bellow blue gear icon to set up the wireless devices for the mLink.



2

 - 2) Click the button “Start Registration” to register wireless devices.



- 3) On each POLI unit, perform wireless registration from its wireless menu (see mSquad or mPlatoon Manual).

Note:

Wireless devices only need to be set up one time.

3